Installation Sheet KSR1315/16

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence.

IP44 ⊕ **\ \ C €** (]^{0.5m} ≥ 240VAC~50Hz 35w

These fittings are Class I and must be Earthed

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature, humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Important User Advice

Always switch off mains supply before servicing.

KSR recommend greasing all threaded parts and cleaning the body every 3 months minimum. At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

General Maintenance

General maintenance and cleaning should be performed at least quarterly. Clean product outer using a damp cloth, dried and buffed to a shine. After any maintenance or lamp replacement, remember to check all seals are intact.

Installation Procedure

Familiarize yourself with the GU10 fixture, remove the two chrome dome nuts that secure the main fitting to the mounting plate.

Set aside the dome nuts and two rubber washers.

Offer the base plate up to a suitable surface and mark the two fixing points, ensuring the cable entry is at the bottom of the plate.

Once drilled, dress the mains supply cable through the grommet and secure to the wall. Terminate the fixed wiring into the terminal block, following the guide below and/or the markings on the fitting.

Ensure the main gasket is seated correctly on the base plate and place the fitting onto it, replace the rubber gaskets onto the exposed threads and finish with the dome nuts.

Remove the front bezel by unscrewing anti-clockwise, install your preferred GU10 lamp, replace the front bezel, ensuring the seals are not squeezed out of place.

Turn on the power and test the luminaire.



Tulua

GU10 Stainless Steel Range

