# (Installation Sheet )KSR1386

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence.



These fittings are Class I and must be Earthed

## Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -10°C - +30°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

#### **Important User Advice**

Always switch off mains supply before servicing.

Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing. To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit. At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

### **Installation Procedure**

Familiarize yourself with the fixture, release the 3x grub screws that secure the main fitting to the mounting plate. Remove the base plate from the body, please note that the seal is a tight fit so will show resistance when trying to remove the base from the body.

Offer the base plate up to a suitable surface and mark both fixing points. Once drilled, dress the mains supply cable through the grommet and secure to the wall, ensuring the grommet creates a seal around the cable. The grommet is not suitable for multiple cable entry.

Terminate the fixed wiring into the terminals Brown - live, Blue - Neutral and Green/Yellow - Earth, following the guide below and/or the markings on the fitting.

Ensure the main gasket is seated correctly on the base plate and place the fitting onto it, tighten the grub screws ensuring the seal is seated correctly.

Turn on the power and test the luminaire.


\*Please note: Depending on the amount of fittings on a circuit you may have to upgrade the breaker to a 'C' or 'D' type to avoid nuisance tripping.


Mains Supply	Luminaire
Live - Brown - C Brown Earth - Green/Yellow - Green/Yellow Neutral - Blue - N - Blue	

 




Available Finish: Black

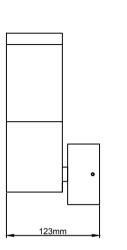

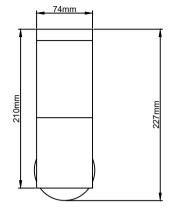



#### Lamp Details

5W LED Non Replaceable Module 3000K Warm White CRI Ra:84 150 Lumens

The light source of this luminaire is not replaceable; when the light source reaches its end of life the light source and control gear shall be replaced

This product contains a light source of energy efficiency class G

KSR Lighting Aftersales: 023 92 674343 E-mail: aftersales@ksrlighting.com

KSR Lighting Ltd, Optimum House, Beeding Close, Southern Cross Trading Estate, Bognor Regis, West Sussex, PO22 9TS.