



Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP65* & IP67 240VAC~50Hz 12W & 40W

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply. Any faulty, broken or damaged luminaires should be replaced immediately. KSR will not accept responsibility for any claims arising from a poor installation. Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature, humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts. KSR recommends these products are installed where the ambient temperature is between 0°C~+35°C,

General Maintenance

These products are suitable for internal or external use, Always switch off mains supply before servicing. Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing. To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit. At the end of life the luminaire is classed as WEEE and should be disposed of in accordance with local legislation. Always check the driver is correct for the application, including its voltage and Amperage. Failure to do this can result in damage to the driver, luminaire or strip! If you are running extra cable please ensure that it is suitable size for the length you are running ensuring that no voltage drop occurs.


Installation Procedure

Disconnect mains supply. Install driver in suitable location. Use fixings provided to fit driver into place. Connect the output cables (Red = + & Black = -) to the luminaire / LED Tape as per the instructions, using a suitable connector for the application. Connect the driver to the mains supply (Blue - Neutral, Brown - Live) using a suitable plug or connector for the application. Switch on mains supply and test.


KSR Lighting Aftersales: 023 92 674343
E-mail: aftersales@ksrlighting.com



KSRDL272*

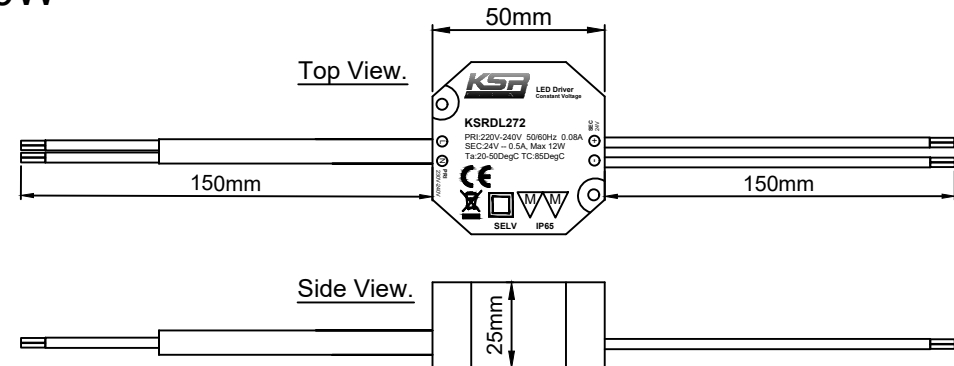

KSRDL273

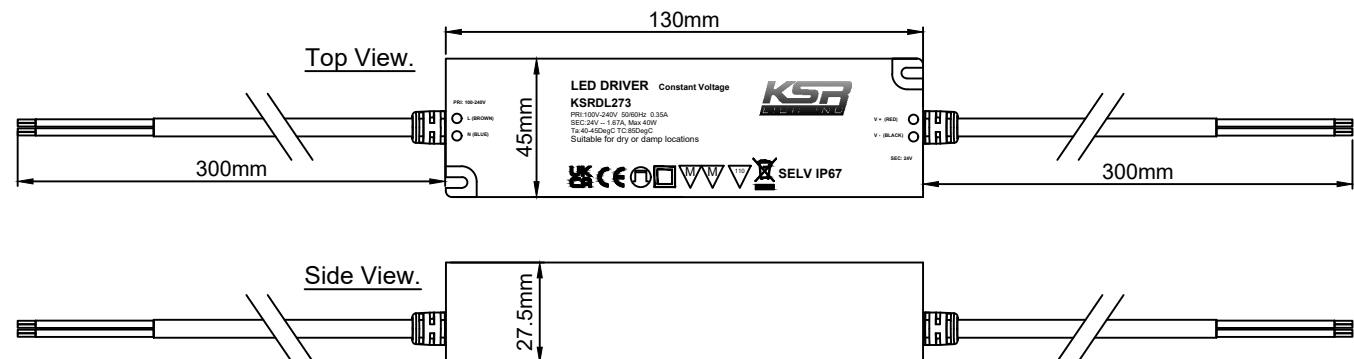

Part Code	Input	Output	Min / Max Wattage	AC Inrush Current
KSRDL272*	100-240VAC 50/60Hz	24V - 2.5A	0.1W - 12W	15A / 230V
KSRDL273	100-240VAC 50/60Hz	24V - 4.17A	0.1W - 40W	30A / 230V